

## PIR SENSOR

Daylight Sensor	Hold Time	Soft on/off
1 2	3 4	5
10Lux	5S	NO
20Lux	30S	YES
40Lux	1Min	
24H	3Min	

Detection range 3-6M  
Detection angle 0~120°

## CCT SWITCH



WW - warm white-3000K  
NW - natural white- 4000K  
CW - cool white -6000K

Remark:only apply for 3 CCT version

## Daylight Sensor

Lux level 10Lux/20Lux/40Lux/24H mode when the PIR is activated.  
If set to "24H" the light will operate at all light levels.

 1 2 10Lux	 >10Lux,when human pass panel, won't work	 <10Lux,when human pass, panel work	 When there is no human pass light won't work
 1 2 20Lux	 >20Lux,when human pass light won't work	 <20Lux,when human pass panel works	 When there is no human pass light won't work
 1 2 40Lux	 >40Lux,when human pass, light won't work	 <40Lux,when human pass, panel works	 When there is no human pass light won't work
 1 2 24H	 Human pass, light will work	 When there is no human pass light won't work	

# easyform

The future of lighting

## Hold Time

The length of time 5S/30S/1Min/3Min the light will remain "ON" once the PIR is activated. If the light is already on, the timer will reset each time the PIR is activated.

 3 4 5S	 Light standby 5S	 3 4 30S	 Light standby 30S
 3 4 1Min	 Light standby 1min	 3 4 3Min	 Light standby 3min

## Soft on/off

No refer to the lamp will turn on with standard brightness when PIR is activated.  
Yes refer to the lamp will gradually brighten in 1S when activated. Once the detection of heat is removed the light will turn off gradually in 3S.

 5 No	 Light turn on when human pass	 5 No	 Light won't work when there is no human pass
 5 Yes	 Light gradually brighten in 1S when human pass and it turns off gradually in 3S after leaving	 5 Yes	 Light won't work when there is no human pass

Additional function:when it is necessary, we can cancel the sensor function.

	Operation	Time interval
Cancel	Turn on → off → on	Off time < 1S
Restore	Turn off → on	Off time < 2S

## Case A ( With Mounting Hole Ready )

### How to Install?

- Cut the hole according to desired size and shape
- Put the slidable springs on the bracket and slide the springs to adjust its position according to size of hole
- Insert the springs with bracket into the ceiling
- Connect the lamp to power supply, push the lamp directly into the bracket
- Installation is done

### How to Uninstall?

- Before uninstall, turn off the power
- Slowly pull out the lamp

## Important information:

A qualified electrician must perform the installation and maintenance. Damage caused by disregarding these operating instructions, incorrect usage, handling or external intervention will result in a forfeiting all of warranty claims. The company is not responsible for any consequences. Before installation, turn off the power.

# easyform

The future of lighting

## Case B ( Without Mounting Hole )

### How to Install?

- Fix the bracket on the ceiling
- Connect the lamp to power supply, push the lamp directly into the bracket
- Clicking sound indicates the installation is done

### How to Uninstall?

- Don't take out the lamp from any one side of the self-lock area
- Don't take out the lamp from any one side of the self-lock area
- Press one side of the lamp frame (perpendicular to bracket), then take out the lamp from the opposite side

## Correct Method to Detach Bracket

Please follow below picture to detach bracket in case you press it on panel before installation

- Take out from both ends simultaneously.
- Don't pull out the bracket forcefully from middle of the lamp.